



# WIRING INSTRUCTIONS


## SMM Steel Canopy V2, V4

## FORD RANGER

## 2011+




FUNCTION	CANOPY WIRING	VEHICLE WIRING
Constant Power(Dome Light)	Red	Red
Rear Demister	Yellow/Red	Black
Central Locking(Lock)	Blue	Grey/Brown (Plug A)
Central Locking(Unlock)	Green	Brown/Green (Plug A)
Earth	Black	Body of the car
Brake Light	Red	Green (Plug B)
Earth	Black	Black (Plug B)

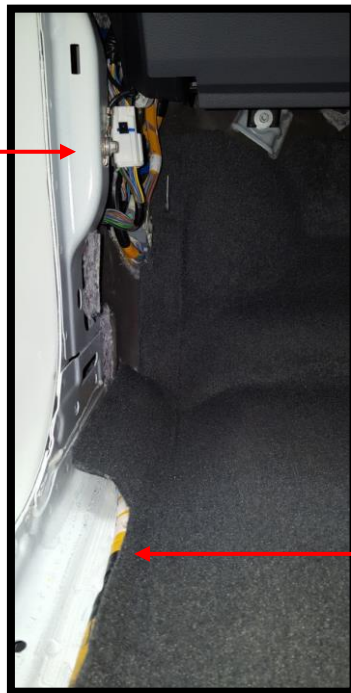

- Plug A is located at the front of the vehicle on the passenger side behind the kick panel.
- Plug B is behind the rear tail light
- The rest of the connections are under the underneath the floor kick panel.


## Plug A.

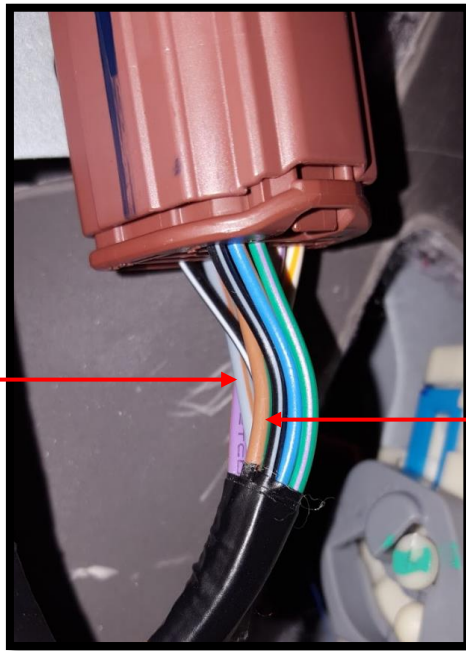

Blue to Grey/Brown (Central Locking- Lock)

Green to Brown/Green (Central Locking- Unlock)

## Connections under floor kick panel.

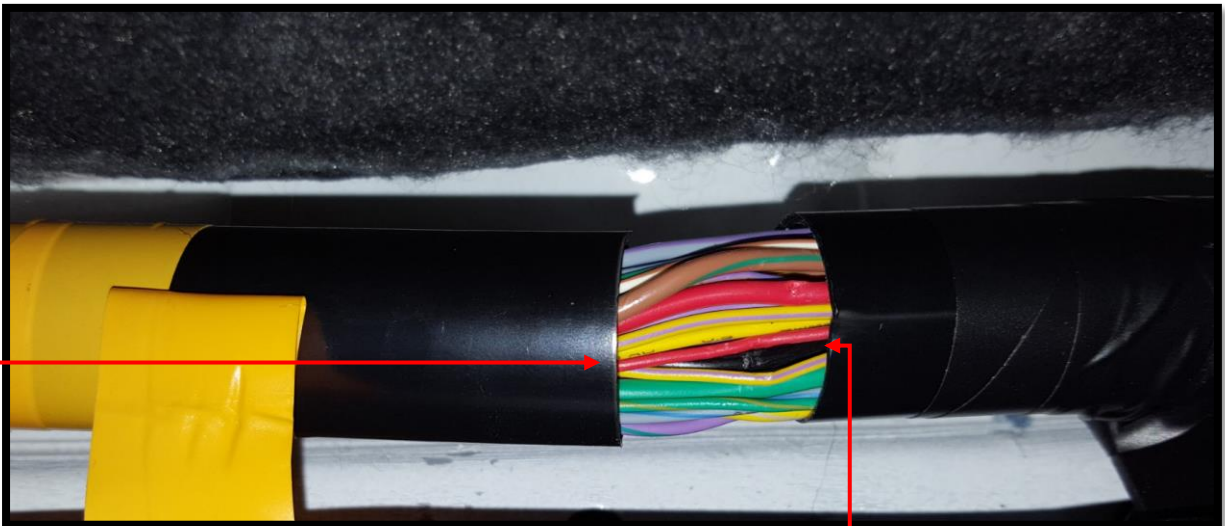


Red to thin Red (Constant Power-Dome light)

Yellow/Red to Black (Rear Demister)

Black to Body of the car (Earth)

## Plug B

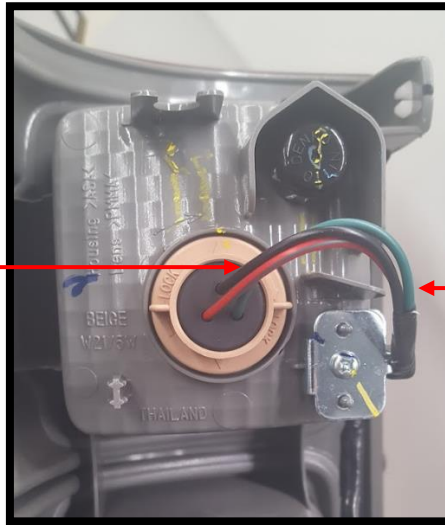

Red to Green (Brake Light)

Black to Black (Earth)

## Running the loom

You will find an opening with a grommet sealing it under the passenger seat to run the loom out under the vehicle. Then run the loom to the rear of the vehicle behind the tail light.



## **PLEASE NOTE**

- Avoid drilling holes in the vehicle. There are always openings into the cabin underneath the vehicle or at the rear.
- Using a L.E.D test light, test all electrical components of the vehicle before and after wiring the canopy to ensure that everything works correctly.
- Ensure you replace all vehicle trim and return the vehicle interior back to how it was found.