



WIRING INSTRUCTIONS


SMM Steel Canopy V2, V4

VW AMAROK

2012+




FUNCTION	CANOPY WIRING	VEHICLE WIRING
Constant Power(Dome Light)	Red	Red/White or Red/Green
Rear Demister	Yellow/Red	White
Central Locking(Lock)	Blue	Yellow/White
Central Locking(Unlock)	Green	White
Earth	Black	Body of the car (Ground)
Brake Light	Red	Black/Red (Plug A)
Earth	Black	Body of the car (Ground)

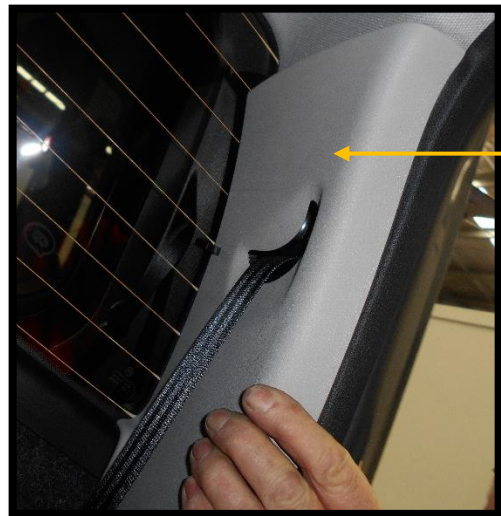

- The wiring connections for Central Locking and Constant Power are located at the front of the vehicle on the passenger side underneath the floor kick panel.
- The rear demister connection is located behind the rear upper pillar on the passenger side. (You may need to extend the rear demister wire)
- Plug A Connection is done behind the tail light on the driver's side.
- Make sure you leave enough length on the loom to reach from the front on the passenger side to behind the taillight on the driver's side.

Front Floor Kick Panel

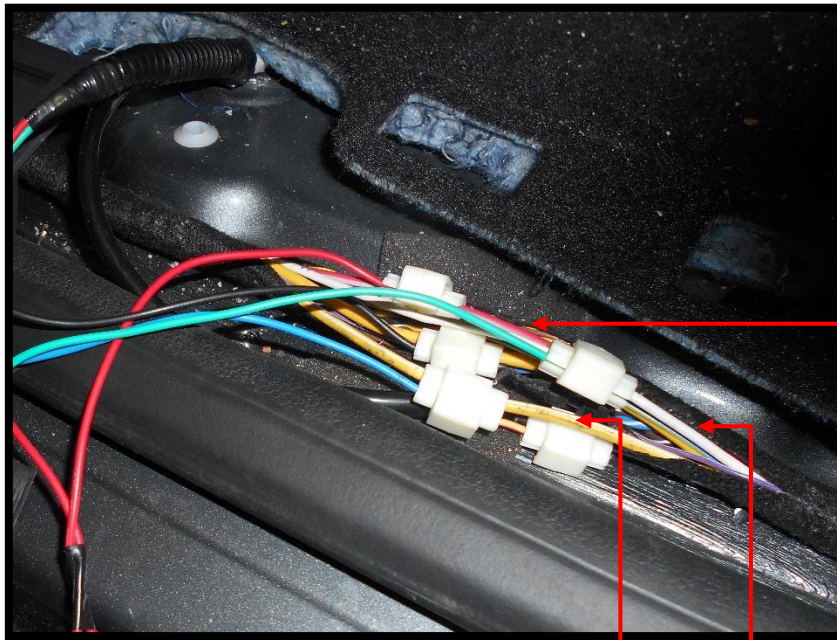

Blue to Yellow/White (Central Locking- Lock)

Green to White (Central Locking- Unlock)

Black (Earth) to Body of the car (Ground)


Red to Red/White OR Red/Green (Constant Power/Dome Lamp) – depend on the vehicle wiring (use test light to check if not sure)

Rear Upper Pillar



Yellow/Red to White (Rear Demister)

Plug A

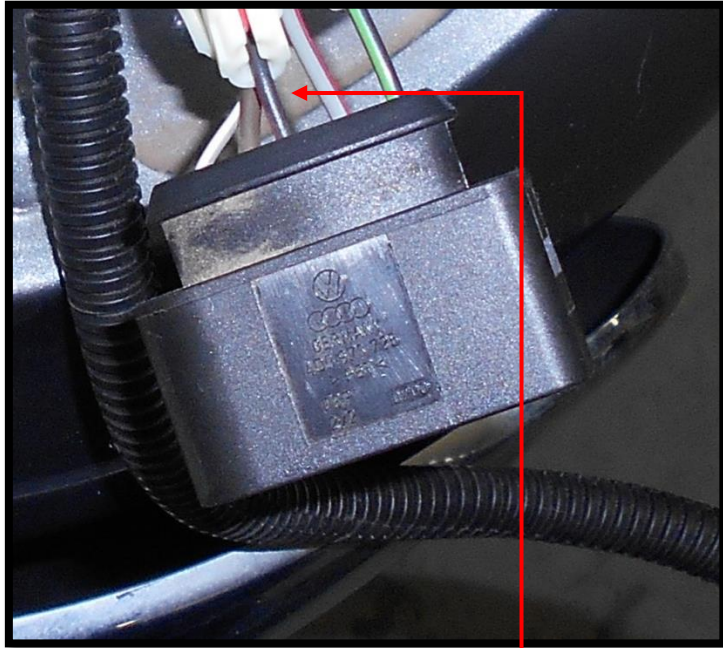

Red to Black/Red (Rear Brake Light)

Black to Body of the car (Ground)

Running the loom.

You will find an opening with a grommet sealing it on the floor at the front on the passenger side. Then run the loom through the hole to the rear of the vehicle behind the tail light on the driver's side.



PLEASE NOTE

- Avoid drilling holes in the vehicle. There are always openings into the cabin underneath the vehicle or at the rear.
- Using a L.E.D test light, test all electrical components of the vehicle before and after wiring the canopy to ensure that everything works correctly.
- Ensure you replace all vehicle trim and return the vehicle interior back to how it was found.